

Part no. 022005

Universal Electronic Connection System

(DE) Einbauanleitung Elektrosatz Anhängervorrichtung mit 7-P Steckdose lt. DIN/ISO Norm 1724.

(GB) Fitting instructions electric wiring kit tow bar with 7-P socket up to DIN/ISO Norm 1724.

(FR) Instructions de montage du faisceau électrique pour crochet d'attelage conforme à la norme DIN/ISO 1724 prise 7-V.

(NL) Montage-handleiding elektrokabelset voor trekhaak met 7-P contactdoos vlg. DIN/ISO norm 1724.

(ES) Instrucciones de montaje de kit eléctrico para enganche de remolque con caja de conexiones 7-P según norma DIN/ISO 1724.

(SE) Monteringsanvisningar elkabelsats för dragkrok med 7-P kontaktdosa enligt DIN/ISO norm 1724.

(PL) Instrukcje montażu zestawu okablowania elektrycznego dyszla holowniczego z 7-stykowym gniazdem DIN/ISO 1724.

(CZ) Montážní pokyny: souprava pro elektrické propojení tažné tyče s 7-P zásuvkou do normy DIN/ISO 1724.

(RU) Инструкция по монтажу комплекта электрического кабеля для сцепного крюка и 7-полюсной розетки согласно стандарту DIN/ISO 1724.

(IT) Istruzioni di montaggio di set di cavi elettrici per gancio da traino con zoccolo a 7-P conforme alla norma DIN/ISO 1724.

(FI) Ohjeet vetokoukun sähkökaapelisarjan asentamiseen, jossa on DIN/ISO 1724 mukainen 7-N liitin.


(DK) Monteringsvejledninger for det elektriske ledningsføringssæt for trækstang med 7-N stikdåse, DIN/ISO, norm 1724.

(GR) Οδηγίες συναρμολόγησης ηλεκτρικού σэт καλωδίων μπάρας ρυμούλκησης με υποδοχή 7-P μέχρι DIN/ISO Κανόνας 1724.



(HU) A DIN/ISO 1724 szabványnak megfelelő, 7-P csatlakozó aljzattal rendelkező vonóhorog elektromos kábelkészletének szerelési kézikönyve.




1

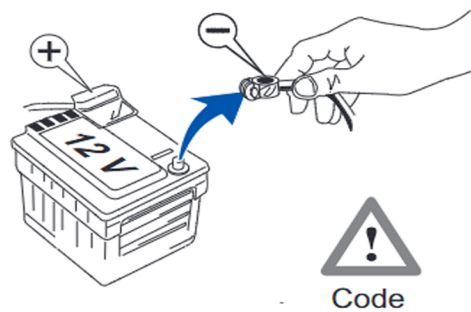

2

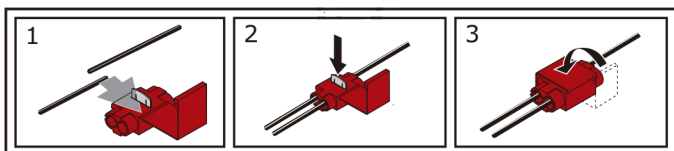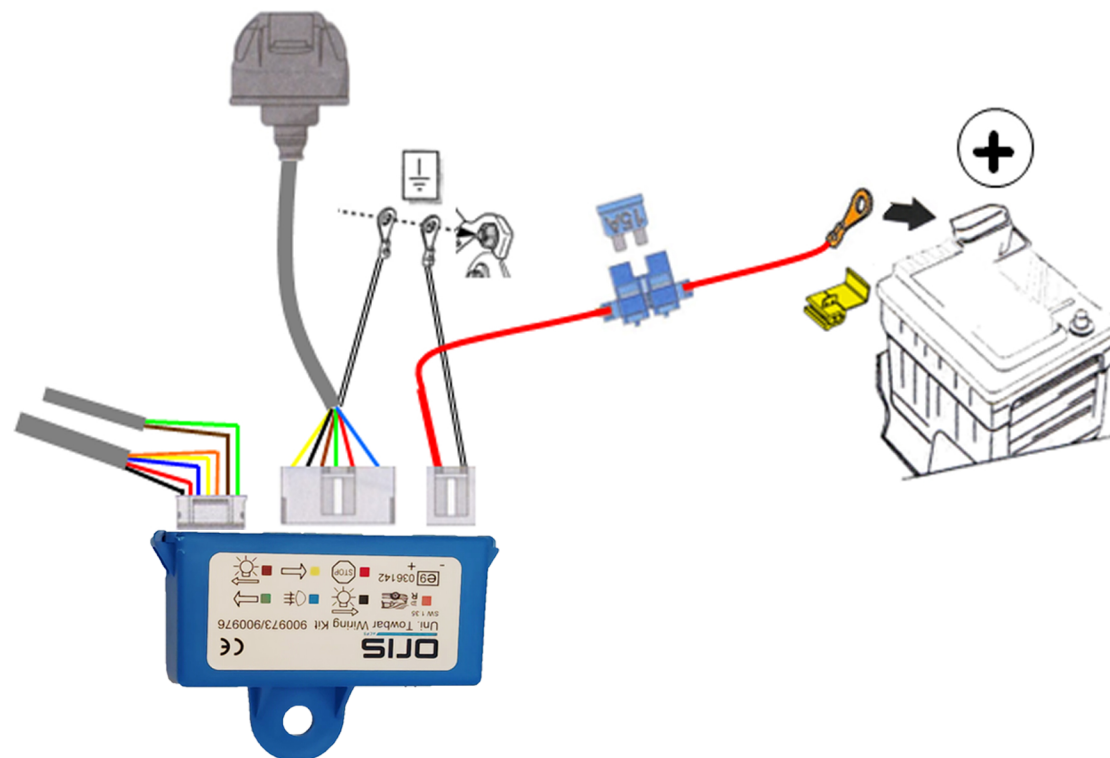


3

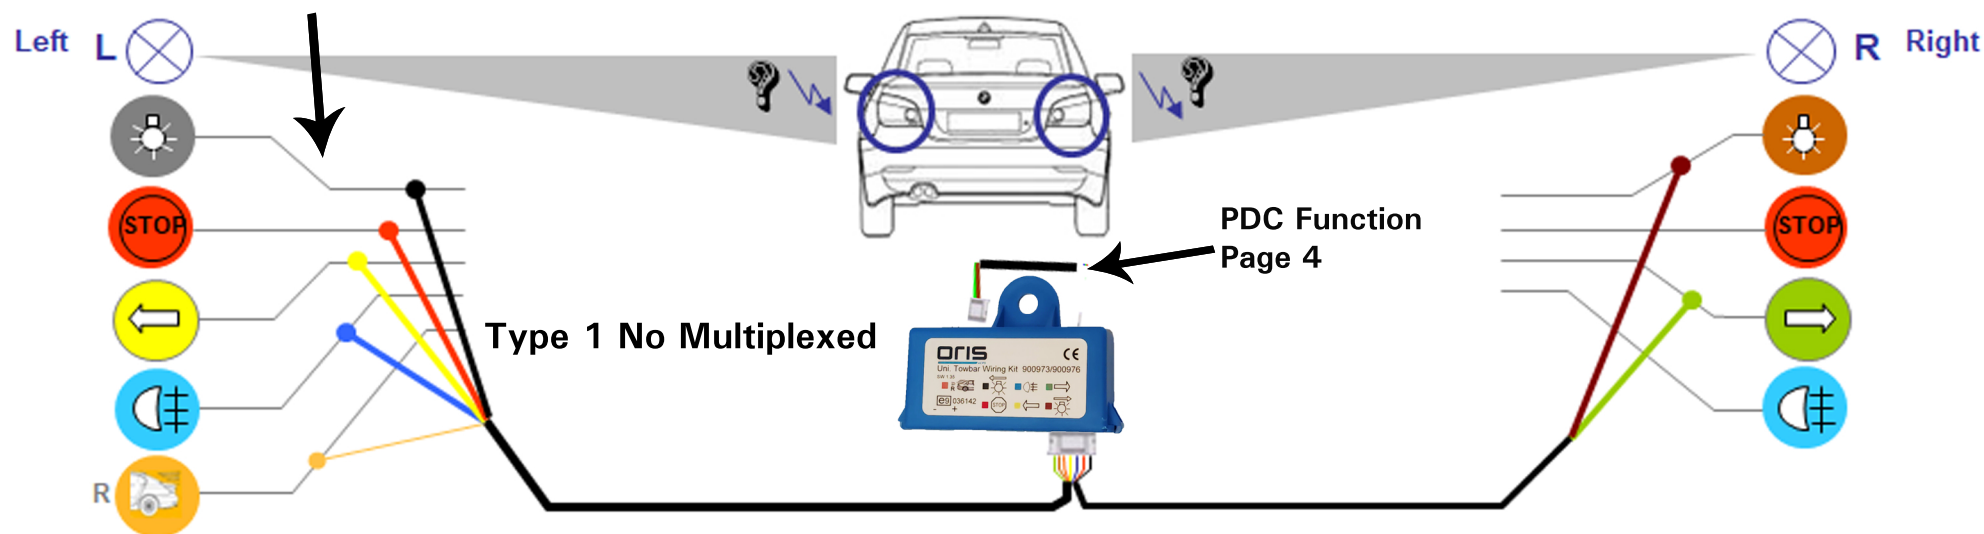

3

Multiplexed cases Type 2 - Type 3

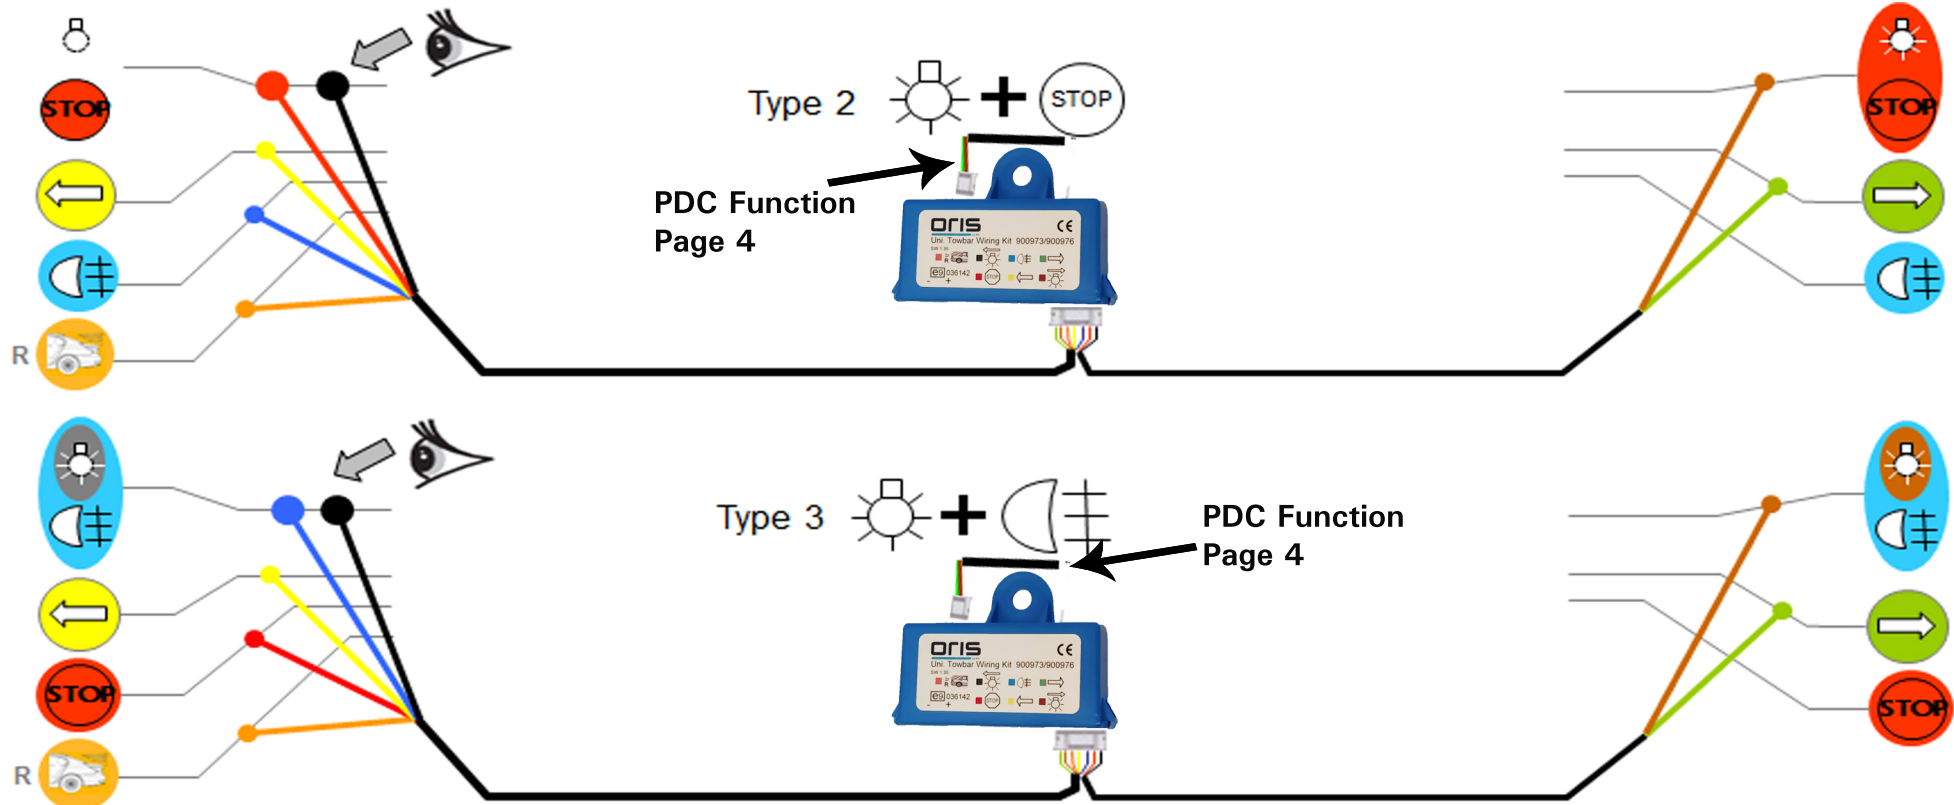

JUMPER 1 OFF - NORMAL FOG LIGHT




JUMPER 1 ON - FOG LIGHT CAR DISCONNECTION



JUMPER 1 ON - FOG LIGHT CAR RESET






5

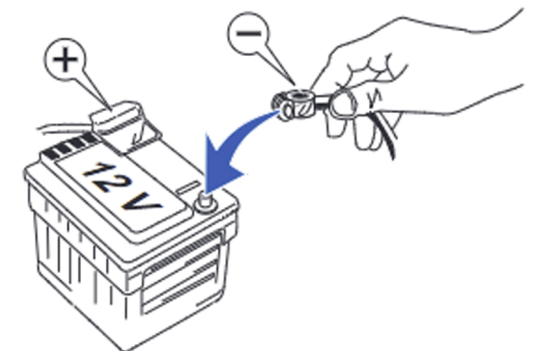

6

OPTION
PDC

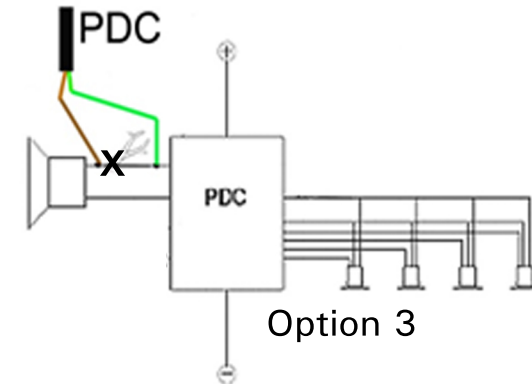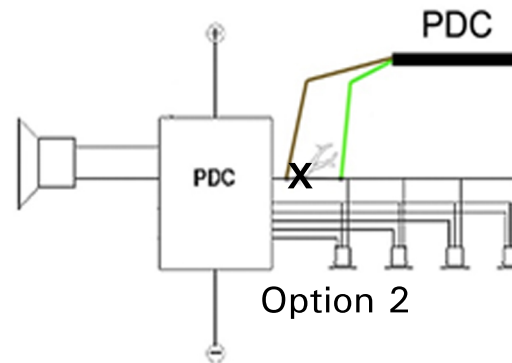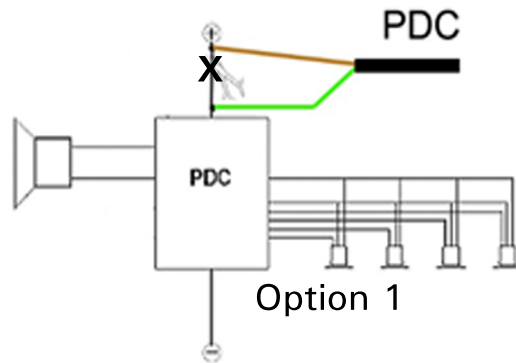

7?

JUMPER 2 MODULE SETUP

SETTING 1 BY DEFAULT
JUMPER OFF

JUMPER ON

SETTING 2
MERCEDES

< 7 VOLTS STOP

SETTING 3
CHRYSLER
VOYAGER

SETTING 4
JAGUAR
S-TYPE

SETTING 5
NO MULTIPLEXED
MAX.SENSITIVITY

SETTING 6
OUTPUT TEST
MODE

SETTING 1
BY DEFAULT

1. Multiplexed/no multiplexed cars (Default factory value).
2. Mercedes with stop light with low voltage, ex. GLC, GLE, B class, C class..
3. Chrysler Voyager with fog light activates by mass.
4. Jaguar S-Type, all lights activate by mass.
5. No multiplexed cars with high sensibility channel inputs.
6. Test mode, the module switch-on each output one second individually to check on the tester that all the outputs are working.



END SETUP
JUMPER OFF